



Sales partner

Issue 7-10 E A 0.11

Venting of the Spring Area

ROEMHELD

HILMA = STARK


Introduction

problems.


Single-acting clamping elements Work supports with venting port without venting port Sintered metal air filter Plug with sintered metal air filter ÷ \oplus \oplus Ð \oplus Plug with sintered metal ai filte B 1.5091 B 1.900 See data sheets: B 1.309 B 1.310 B 1.570 B 1.910 B 1.7441 B 1.849 B 1.911 B 1.880 B 1.913 B 1.881 B 1.914 B 1.883 B 1.921 B 1.885 B 1.942 B 1.891 B 1.950 B 1.892

What happens during venting?

Û Air Workpiece Excess xces Oil Excess pressure Oi Suction of air ϑ

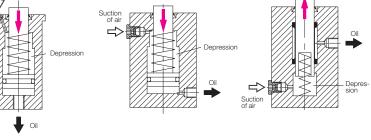

Subject to change without prior notice

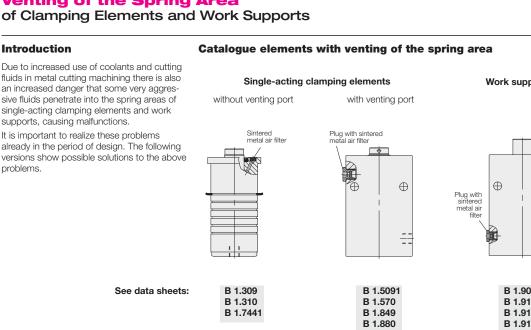

Why venting has to be made?

Excess pressure or depression in the spring area change the spring forces which leads to malfunctions.

Formation of condensation water promotes rust formation and can lead to a complete failure of the elements.

Leakages of hydraulic seals must drain off to the exterior without pressure, otherwise there will be malfunctions.

Dust and swarf are retained by sintered metal air filters.

Liquids are the real problem, because they are drawn off through the air filter. Thereby the breathing spring area is reduced, a higher excess pressure or depression is caused and the function is impaired.






Sales partner

Precautions • Accessories for venting


Precautions

If there is the danger that liquids enter the system, you have to prevent it.

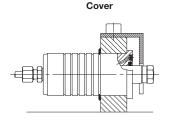


 Clamping elements without venting port can be covered, but due to the nowadays usual quantities of coolants this does not seem to be successfull. In such applications you should use other clamping elements, preferably double-acting elements.





 Connection of a venting hose is indicated if the opening is displaced to a point where no liquid can penetrate.



The spring area shall be increased by the connection of an additional area so that only a little excess pressure or depression will be generated so that neither the functioning of the elements will be influenced nor liquids will be drawn off. Electric wiring boxes provided with connecting threads for venting hoses proved to be worthwhile. The volume of this "additional area" should be **ten times the stroke volume** of all connected elements.

Important note!

In the case of temperature variations, condensation water can precipitate in a closed ventilation system. Possibly also coolants can enter into the system through the connected clamping elements and work supports.

Recommendation

Open the empty housing regularly (depending on the operating conditions) and dry the interior.

Venting accessory

Plastic hose

for the following connecting elements black **Part-no. 3890-131**

Insertion nipple fitting

Part-no.	Size
3890-091	M 5
3890-092	1/8
3890-093	1/4

L-insertion nipple fitting

swivelling	Size	Part-no.
	M 5	3890-094
	1/8	3890-095
	1/4	3890-096

L-insertion nipple distributor

Part-no.
3890-097


Hose connection L-piece 90°

Part-no.
3890-098

Steel tubes and fittings see data sheet F 9.300 Pneumatic accessories

see data sheet J 7.400

Empty housing, material: aluminium, grey lacquered

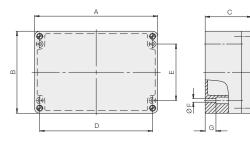

Volum	e [cm³]	400	1,600	2,800
А	[mm]	125	160	260
В	[mm]	80	160	160
С	[mm]	57	91	91
D	[mm]	113	140	240
E	[mm]	52	110	110
ØF	[mm]	4.3	6.3	6.3
G	[mm]	10	21	21
Part-n	o. 63	50-907	3141-188	6355-833

Calculation example for a clamping fixture with the elements below

Quanti	ty Element	Piston / bolt Ring Ø [mm]	Stroke [mm]	Air volume per stroke [cm ³]
1	Block cylinder 1513-000	25/16	8	2.3
2	Swing clamp 1885-104	40	22	55.3
2	Threaded work support 1957-002	50	20	78.5
Total				136.1

Selection of empty housing:
136.1 × factor 10 = 1.361 cm³
suitable empty housing (1,600 cm ³)

Part-no. 3141-188

A 0.110 / 7-10 E

Subject to change without prior notice