




Spare Parts List Inline Filter LPF

Manifold Mounted, Rear Flanged
with Integrated Cooler Bypass Valve
up to 260 l/min, up to 50 bar

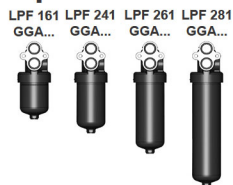

1. MAINTENANCE

1.1 GENERAL

Please follow the maintenance instructions!

1.2 INSTALLATION

Before fitting the filter into the system, check that the operating pressure of the system does not exceed the permitted operating pressure of the filter.

Refer to the name plate on the filter!
Under extreme conditions (e.g. cold start), bypass valves will allow a partial flow past the element for a short time.

1.3 COMMISSIONING

Check that the correct filter element is fitted. Screw in bowl again fully and then unscrew by one quarter-turn (the sealing effect will not be improved by overtightening!)

Switch on the hydraulic system and check filter for leakage.

Vent filter at an appropriate point in the system.

1.4 TOOLS REQUIRED FOR MAINTENANCE

Size	Spanner for filter bowl	Key for VD 0 A.1
161-281	AF width 27	AF width 27

1.5 TORQUE VALUES FOR CLOGGING INDICATORS

Type	Max. torque
VM	33 Nm

2. CHANGING THE ELEMENT

2.1 REMOVING THE ELEMENT

1. Switch off hydraulic system and release filter pressure.
2. Unscrew filter bowl (drain fluid into a suitable container and clean or dispose of it in accordance with environmental regulations).
3. Remove filter element from element spigot in filter head (check surface of element for dirt residue and larger particles; these can indicate damage to components).
4. Replace filter element.
5. Clean filter bowl and filter head; particular attention must be given to the threads!
6. Examine filter, especially sealing surfaces, for mechanical damage.
7. Check O-rings and replace parts if necessary.

2.2 FITTING THE ELEMENT

1. Wet the sealing surfaces and thread on the filter head and bowl, as well as the O-ring, with clean operating fluid.
2. When fitting a new filter element, check that the designation corresponds to that of the old element.
3. Place filter element carefully on to the element spigot.
4. Screw in filter bowl fully and then unscrew by one quarter-turn.
5. Switch on hydraulic system and vent filter at a suitable point in the system.
6. Check the filter for leakage.


NOTICE:

Contamination or incomplete pressure release on disassembly can lead to seizing of the bowl thread.

Filter elements which cannot be cleaned must be disposed of in accordance with environmental protection regulations.

3. SPARE PARTS

3.1 SPARE PARTS DRAWING LPF 161 – 281 GGA

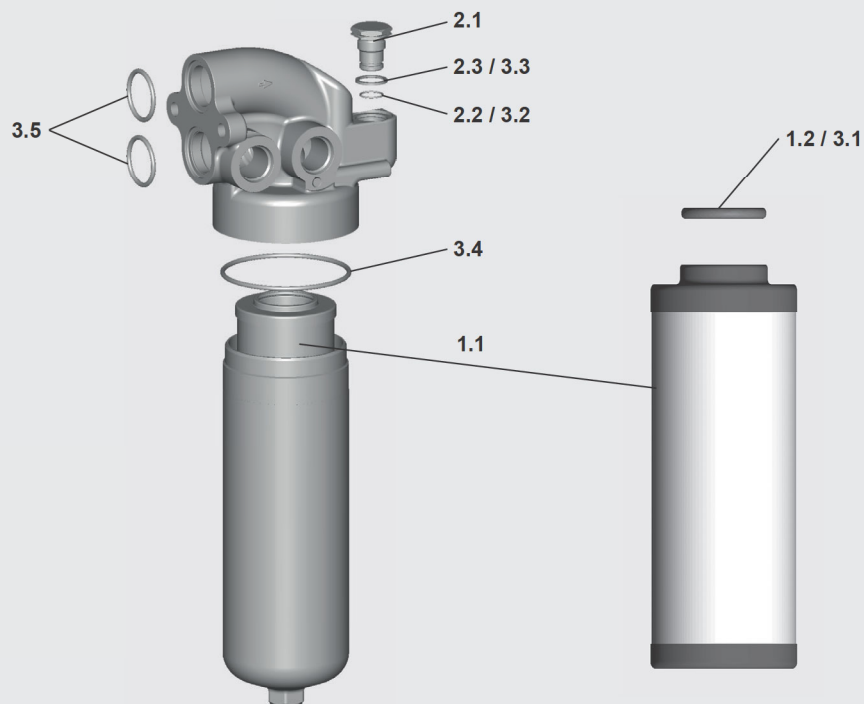

3.2 SPARE PARTS LIST LPF 161 – 281 GGA

Item	Con-sists	Description	161	241	261	281
1.		Filter element	see Pt. 4. Replacement element			
	1.1	Filter element	0161 RD ...	0241 RD ...	0261 RD ...	0281 RD ...
	1.2	O-ring	42.52 x 2.62			
2.		CLOGGING INDICATOR or screw plug	See Point 5. Replacement clogging indicator			
	2.1	Screw plug VD 0 A.1 VD 0 A.1 /-V	00305932 00305931			
	2.2	O-ring	15 x 1.5			
	2.3	Profile seal ring	VD...			
3.		Seal kit LPF GGA Seal kit LPF GGA /-V	01303874 01303875			
	3.1	O-ring (element)	42.52 x 2.62			
	3.2	O-ring (indicator)	15 x 1.5			
	3.3	Profile seal ring (indicator)	VD...			
	3.4	O-ring (bowl)	91.67 x 3.53			
	3.5	O-ring (flange)	32.92 x 3.53			

Other spare parts on request

4. REPLACEMENT ELEMENT

	0241	RD	010	ON	/-V
Size	0161, 0241, 0261, 0281				
Type	RD				
Filtration rating	ON: 001, 003, 005, 010, 015, 020 MM: 008, 010, 015				
Filter material	ON, MM				
Supplementary details	V, W (For description, see "LPF, side flanged with integrated cooler bypass valve")				

5. REPLACEMENT CLOGGING INDICATOR

	VM	2	D	X	/-L24
Type of indicator	VM Differential pressure indicator up to 210 bar operating pressure				
Response pressure	2 standard 2 bar, others on request				
Type of clogging indicator	A with screw plug in indicator port B visual C electrical D visual and electrical				
Modification number	X the latest version is always supplied				
Supplementary details	L..., LED, V, W (for description, see "Clogging Indicators" brochure)				

6. MAINTENANCE INSTRUCTIONS

6.1 USER INSTRUCTIONS FOR FILTERS



Notice

This pressure equipment must only be put into operation in conjunction with a machine or system.



Notice

The pressure equipment must only be used as stipulated in the operating instructions of the machine or system.



Notice

This pressure equipment must only be operated using hydraulic or lubricating fluid.



Caution

The user must take appropriate action (e.g. venting) to prevent the formation of air pockets.



Caution

Repair, maintenance work and commissioning must be carried out by specialist personnel only.

Allow the pressure equipment to cool before handling.

The stipulations of the operating instructions of the machine or system must be followed.



Danger

Caution: pressure equipment! Before any work is carried out on the pressure equipment, ensure the pressure chamber concerned (filter housing) is depressurised.



Danger

On no account must any modifications (welding, drilling, opening by force etc.) be carried out on the pressure equipment.



Notice

It is the responsibility of the owner to comply with the water regulations of the country concerned.



Caution

Statutory accident prevention regulations, safety regulations and safety data sheets for fluids must be observed.



Caution

Filter housing must be earthed.



Caution

When working on, or in the vicinity of, hydraulic systems, naked flames, spark generation and smoking are forbidden.



Caution

Hydraulic oils and water-polluting fluids must not be allowed to enter the soil or watercourses or sewer systems. Please ensure safe and environmentally friendly disposal of hydraulic oils. The relevant regulations in the country concerned with regard to ground water pollution, used oil and waste must be complied with.



Caution

Whenever work is carried out on the filter, be prepared for hot oil to escape which can cause injury or scalding as a result of its high pressure or temperature.



Danger

When using electrical clogging indicators, the electrical power supply to the system must be switched off before removing the clogging indicator connector.

Customer Information in respect of Machinery Directive 2006/42/EC

Hydraulic filters are fluid power parts/ components and are therefore excluded from the scope of the Machinery Directive. They do not bear the CE mark.

Before using these components, ensure compliance with the specifications provided by HYDAC Filtertechnik GmbH in this documentation.

The specifications also contain information on the relevant essential health and safety requirements (based on Machinery Directive 2006/42/EC) that are to be applied by the user.

We hereby declare that the filters are intended to be incorporated into machinery within the terms of the Machinery Directive 2006/42/EC.

It is prohibited to put the filters into service until the machinery as a whole is in conformity with the provisions of the Machinery Directive. Furthermore, our Terms of Sale and Delivery are available on our website (www.hydac.com).

SERVICE ADDRESSES

HYDAC Service GmbH
Postfach 1251
66273 Sulzbach / Saar, Germany

Factory address:
Werk 13
Friedrichsthaler Str. 15
66540 Neunkirchen / Heinitz
Germany

ServiCenter:
Tel.: +49 (0) 6897 / 509-9083
Fax: +49 (0) 6897 / 509-9881

Customer service:
Tel.: +49 (0) 6897 / 509-412
Fax: +49 (0) 6897 / 509-828

6.2 MAINTENANCE, GENERAL

This section describes maintenance work which must be carried out periodically. The operational safety and life expectancy of the filter, and whether it is ready for use, depend to a large extent on regular and careful maintenance.

6.3 MAINTENANCE MEASURES

- Spare parts must fulfil the technical requirements specified by the manufacturer.
This is always guaranteed for original HYDAC spare parts.
- Keep tools, working area and equipment clean.
- After disassembling the filter, clean all parts, check for damage or wear and replace parts if necessary.
- When changing a filter element, a high level of cleanliness must be observed!

6.4 INTERVAL BETWEEN ELEMENT CHANGES

In principle we recommend that the filter element is changed after 1 year of operation at the latest.

We recommend installing the filter with a clogging indicator (visual and/or electrical or electronic) to monitor the filter element.

If the clogging indicator responds, it is necessary to change or clean the filter element without delay (only W and V elements can be cleaned).

When no clogging indicator has been fitted, we recommend changing the elements at specific intervals. (The frequency of changing the filter elements depends on the filter design and the conditions under which the filter is operated.) When filter elements are subject to high dynamic loading it may prove necessary to change them more frequently. The same applies when the hydraulic system is commissioned or repaired or when the oil is changed.

The standard clogging indicators only respond when fluid is flowing through the filter. With electrical indicators the signal can also be converted into a continuous display on the control panel. In this case the continuous display must be switched off during a cold start or after changing the element.

If the clogging indicator responds during a cold start only, it is possible that the element does not yet need to be changed.

NOTE

The information in this brochure relates to the operating conditions and applications described. For applications and operating conditions not described, please contact the relevant technical department. Subject to technical modifications.