

Electric Drives
and Controls

Hydraulics

Linear Motion and
Assembly Technologies

Pneumatics

Service

Rexroth
Bosch Group

Electric amplifier modules

RE 30222/07.12
Replaces: 01.09

1/6

Type VT-MSPA1-5...

Component series 1X



Table of contents

Contents

Features	1
Ordering code	2
Front plate	2
Block diagram with pin assignment	3
Technical data	4
Device dimensions	5
Project planning / maintenance instructions / additional information	5

Features

Page	
1	– Suitable for controlling direct operated proportional valves without electrical feedback
2	– Design: Module for snapping onto carrier rails
2	– Differential input for command value voltage 0...+10 V
3	– Ramp generator up and down can be set separately
4	– Zero point potentiometer
5	– Clocked output stage
5	– LED display: • Supply voltage • Ready for operation • Ramp "Off"
	– Removable connector strip

Notice:

The photo is an example configuration.
The delivered product differs from the figure.


Ordering code

VT-M	S	P	A	1	-	-1X/V0	
Hydraulic component For valves without electrical feedback = S							Customer version
Valve type Proportional valve = P							Catalog version
Control Analog = A							Component series 10 to 19 (10 to 19: Unchanged technical data and pin assignment)
Output stages 1 output stage = 1							Serial number for types 0.8 A solenoid 2.5 A solenoid
508 = 525 =							
V0 = 1X =							


Preferred types

Amplifier type	Material number	For proportional valves, direct operated, without electrical feedback
VT-MSPA1-525-10/V0	0811405127	DBETX-1X...-25...
		DBE6X-1X...-25...
		(3)2FREX...-1X...-25...
VT-MSPA1-508-10/V0	0811405126	DBETX-1X...-8...
		DRE10Z-1X...-8...
		DRE6X-1X...-8...
		DBE6X-1X...-8...
		DBE10Z-1X...-8...

Front plate

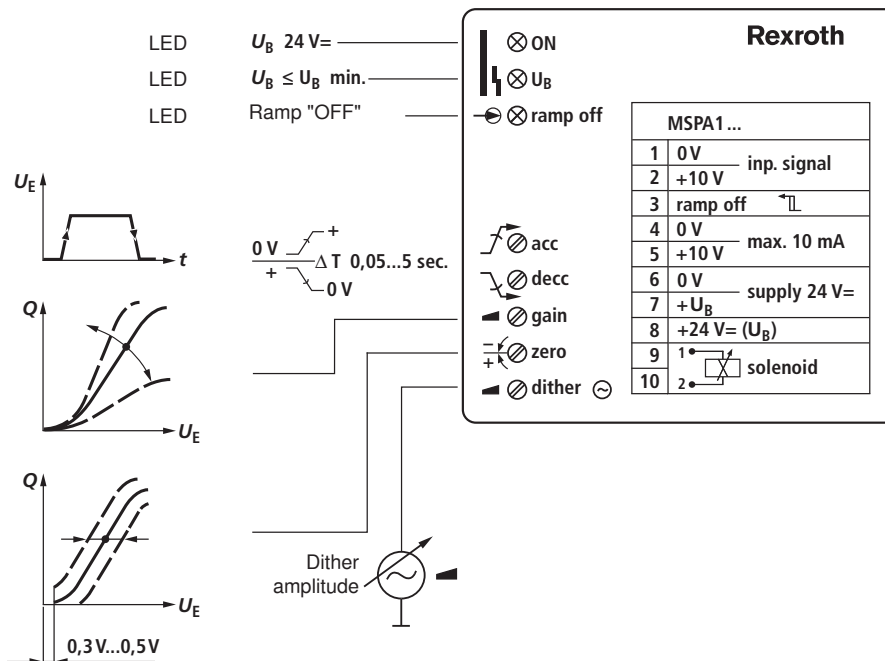

Block diagram with pin assignment

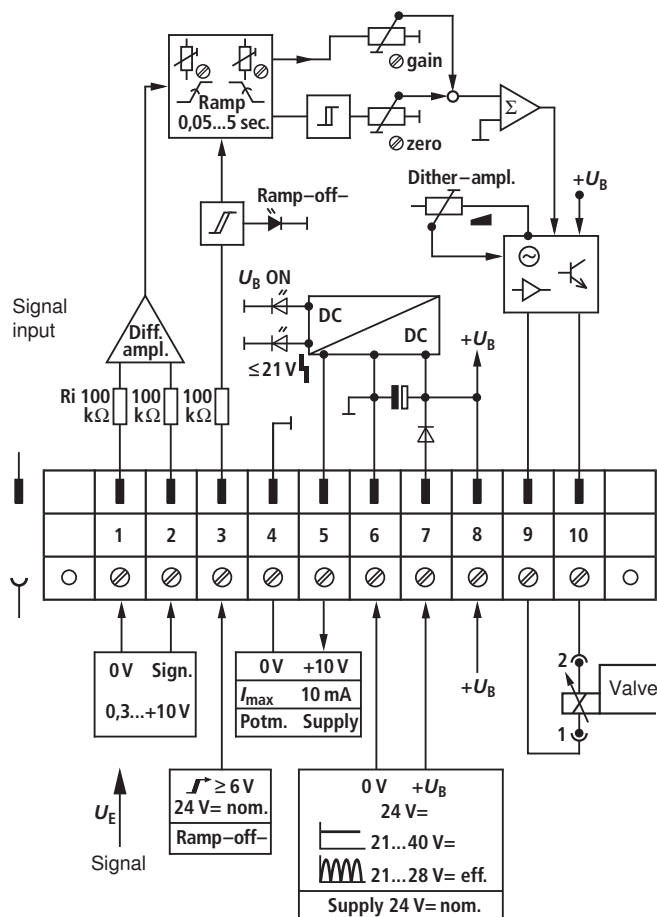

Technical data (For applications outside these parameters, please consult us!)

		VT-MSPA1-508-10/V0	VT-MSPA1-525-10/V0
Supply voltage U_B at (7) – (6)		Nominal 24 V = Battery voltage 21...40 V, Rectified alternating voltage $U_{eff} = 21...28$ V (one-phase, full-wave rectifier)	
Valve solenoid	A/VA	0.8/25	2.5/55
Current consumption max.	A	1.25	2.5
		The current consumption may increase with min. U_B and an extreme cable length to the control solenoid	
Max. power consumption	VA	30	60
Command value		(2): 0...+10 V } Differential input (1): 0 V ($R_i = 100$ k Ω)	
Command value source		Potentiometer 10 k Ω Supply +10 V from (5) (10 mA) or external signal source	
Solenoid output (9) – (10)	A	Clocked current controller $I_{max} = 0.8$ $I_{max} = 2.5$	
Cable lengths between amplifier and valve		Solenoid cable: up to 20 m 1.5 mm ² 20 to 50 m 2.5 mm ²	
LED displays		green: Enable yellow: Ramp off red: Undervoltage (U_B too low)	
External ramp switch-off		(3): 6...40 V = (24 V_{nom})	
Ramp times	s	0.05...5	
Adjustment possibilities		Zero point valve, Ramp times, Sensitivity, Dither amplitude	
Special features		Inputs and outputs short-circuit-proof, Clocked output stage, Fast energization for short actuating time	
Format (W x L x H)	mm	(86 x 110 x 70.5)	
Design		Module	
Mounting		Top hat rail TH35-7,5 or G rail G32 according to EN 60715	
Plug-in connection		Connector, 10-pole (screw terminal)	
Ambient temperature	°C	0...+70	
Storage temperature range	°C	-20...+70	
Weight	m	0.31 kg	

Information for the use of ramps

Setting of ramp UP (acceleration) and ramp DOWN (braking)
via 1 trimming potentiometer each.

Ramp ON, if (3) = 0 V (open). **Ramp OFF**, if (3) = 24 V_{nom} (min.: ≥ 6 V high).


With **ramp OFF**, a previously started ramp is canceled.

Transition to the signal end value is effected as step.

Setting zero: With 0.5 V signal (min. 0.3 V).

Max. setting: With +10 V signal.

Device dimensions (dimensions in mm)

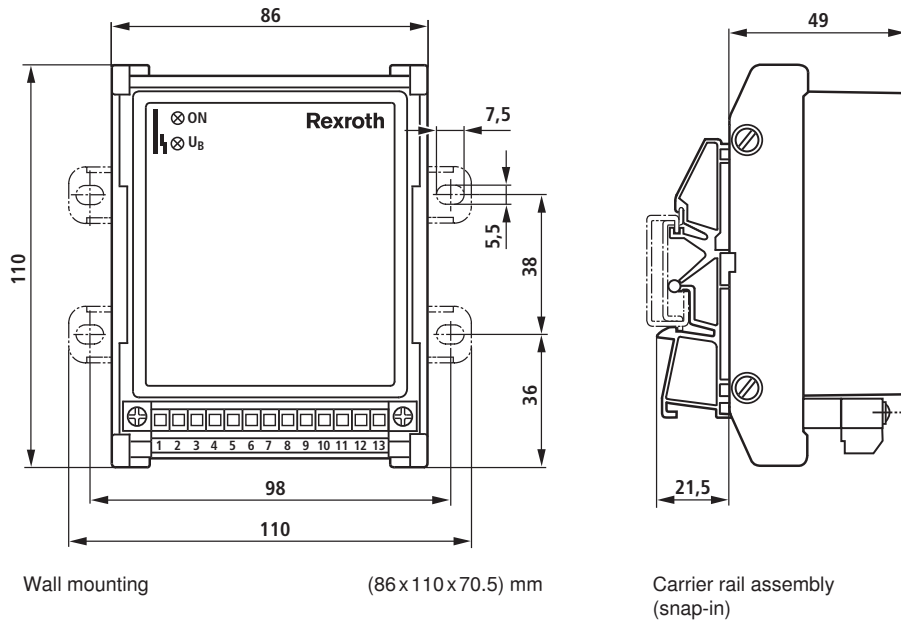

Project planning / maintenance instructions / additional information

- The distance to aerial lines, radios and radar systems must be sufficient (> 1 m).
- Do not lay solenoid and signal lines near power cables.
- For signal lines and solenoid conductors, we recommend using shielded cables.
The cable shield must be connected to the control cabinet extensively and as short as possible.
- The cable lengths and cross-sections specified on page 4 must be complied with.

Notes

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent. The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.