

The Drive & Control Company

Rexroth Bosch Group

Internal gear pump Fixed displacement

Type PGH



RΕ	10223

Edition: 2019-02 Replaces: 04.2013

- ► Frame size 2 and 3
- ▶ Size 5 ... 16
- Component series 2X
- Maximum operating pressure 350 bar
- ▶ Displacement 5.2 ... 16.0 cm³

Features

- ► Fixed displacement
- ► Low operating noise
- ▶ Low flow pulsation
- High efficiency also at low speed and viscosity due to sealing gap compensation
- ► Suitable for broad viscosity and speed ranges
- ► Can be combined with internal gear pumps, radial piston pumps, gerotor pumps and external gear pumps
- ▶ Mounting dimensions according to ISO 3019-1.
- ► Connection dimensions according to ISO 6162-1
- Suitable for HLP, HETG, HEES and HFD and HFC hydraulic fluids
- ▶ Use in fatigue endurable drives with high pressures at very high numbers of load cycles with constant or variable speed in direct drives or with accumulator charging function, e.g.:
 - Plastics processing machines
 - Machine tools
 - Presses
 - Test stands

Inhalt	
Ordering code	2
Functional description	3
Technical data	4
Average characteristic curve values of frame	
sizes 2 and 3	5
Dimensions of frame size 2	6
Dimensions of frame size 3	7
Multiple pumps	9
Project planning information	12
Installation information	13
Commissioning information	14

 $\mathsf{RE}\,10223/2019\text{-}02, \mathbf{Bosch}\;\mathbf{Rexroth}\;\mathbf{AG}$



2 **PGH** | Internal gear pump Ordering code

Ordering code

01	02	03		04		05	06	07	08	09	10	11
PG	Н		-	2X	/				07		U2	
	'											
ype												
01 Inte	rnal gear pum	ip, fixed dis	placement,	, gap-comp	ensated							PG
Series												
02 High	n-pressure pu	mp, peak p	ressure 350) bar								Н
rame si	izes BG											
03 BG2	2											2
BG3	3											3
Compon	ent series											
04 Com	nponent serie	s 20 29 (20 29: u	nchanged i	nstallation	and conne	ction dimen	isions)				2X
Sizes								NG				
05 BG2	2							5				005
								6				006
								8				008
BG3	3							11				011
								13				013
								16				016
Direction	ns of rotation	ı										
06 Viev	ved on drive s	shaft						clockwise	9			R
								countercl	ockwise			L
Orive sh	afts											
07 Cyli	ndrical shaft v	with fitting	key, DIN 68	85								E
Spli	ned shaft acc	ording to IS	SO 3019-1					16-4 9T 16/32DP				
								19-4 11T	16/32DP			S
_ine con	nections											
08 Suction and pressure port: SAE flange connection according to ISO 6162-1								07				
Seals			·	·	·				·			
09 FKM seals and FKM shaft seal ring, suitable for HLP, HETG, HEES and HFD hydraulic fluids								V				
FKM seals with NBR shaft seal rings, suitable for HFC hydraulic fluids								w				
Mountin	g flange											
	ole mounting f	flange acco	rding to ISC	3019-1								U2
		0	0			,						
11 Eurt	her details in	the plain to	ovt					-				
II I ult	inci uctans III	the plain to	JA1									

Order example

PGH3-2X/016RE07VU2

Material number

R900951305

Not all variants according to the type key are possible! Please select the desired pump using the selection

tables (page 6 to 8) or after consultation with


Bosch Rexroth.



Internal gear pump | **PGH** Functional description

3

Functional description

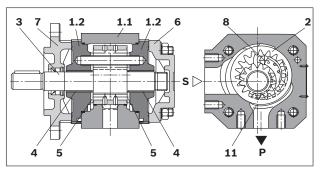

Set-up

Hydraulic pumps of type PGH are gap-compensated internal gear pumps with constant displacement.

They basically comprise of housing (1.1), bearing cover (1.2), internal gear (2), pinion shaft (3), plain bearings (4), axial washers (5), end cover (6), mounting flange (7) and stop pin (8), as well as the segment filler element (9) consisting of segment (9.1), segment support (9.2) and the sheet seals (9.3).


Suction and displacement procedure

The hydrodynamically supported pinion shaft (3) drives the internally geared internal gear (2) in the displayed direction of rotation.

During the rotation, there is a volume increase over an angle of approx. 90° in the suction range. An underpressure results and fluid flows into the chambers.

The sickle-shaped segment filler element (9) separates suction and pressure chamber. In the pressure chamber, the teeth of the pinion shaft (3) engage in the space between the teeth of the internal gear (2) again. The liquid is displaced via the pressure channel (P).


Axial compensation



The axial compensation force F_A takes effect in the area of the pressure chamber and is generated with the pressure field (10) in the axial washers (5).

So the axial longitudinal gaps between the rotating and the fixed parts are extraordinarily small and ensure perfect axial sealing of the pressure chamber.

Radial compensation



The radial compensation force F_R acts on segment (9.1) and segment support (9.2).

Dependent on the operating pressure, the two segment filler elements (9.1) and (9.2) are pressed against the head diameters of pinion shaft (3) and internal gear (2). The area ratios and the position of the sheet seal (9.3) between the segment and segment support are designed so that an almost leakage gap-free sealing between internal gear (2), segment filler element (9) and pinion shaft (3) is achieved.

Spring elements under the sheet seals (9.3) ensure sufficient contact pressure, also with very low pressures.


Hydrodynamic and hydrostatic mounting

The forces acting on the pinion shaft (3) are accepted by hydrodynamically lubricated radial plain bearings (4); the forces acting on the internal gear (2) by the hydrostatic bearing (11).

Gear tooth system

The gear tooth system is an involute tooth system. Its large meshing length results in little flow and pressure pulsation; these little pulsation rates considerably contribute to the low-noise running.

▼ Symbol



 $\mathsf{RE}\ 10223/2019\text{-}02, \mathbf{Bosch}\ \mathbf{Rexroth}\ \mathbf{AG}$



4 **PGH** | Internal gear pump Technical data

Technical data

Frame size			BG	2	2	2	3	3	3		
Size			NG	5	6	8	11	13	16		
Displacement,	, geometrical	Vg	cm ³	5.24	6.5	8.2	11.0	13.3	16.0		
Drive speed		n _{min}	rpm				600				
		n _{max}	rpm				3000				
							0.55				
Operating pre	ssure, absolute										
Input p			bar			0.8 2 (sho	rtly, upon start 0	0.6 bar)			
Output	permanent										
	Mineral oils	p _n	bar				315				
	Special fluids	p _n	bar				210				
	intermittent ¹⁾										
	Mineral oils	p_{max}	bar				350				
	Special fluids	p_{max}	bar				230				
Flow (at n = 1 v = 46 mm ² /s)	450 rpm; p = 10 bar;	q_V	l/min	7.5	9.3	11.8	15.8	19.1	23.0		
Weight		m	kg	4.3	4.4	4.6	4.8	5	5.3		
Shaft load				Radial an	d axial forces	(e.g. belt pul	ley) only after co	ordination			
Type of mount	ting			Flange mounting							
Hydraulic flui	d			Classific	ation	Suita	ble seal design	Standards	Data shee		
Mineral oils				HLP, HLI	PD, HVLP, HVL	_PD	V	DIN 51524	90220		
Special fluids	► environmental	ly compati	ble	HETG							
				HEES			V	ISO 15380	90221		
				HEPG							
	▶ water-free, fla	me-resista	nt	HFDU			V ISO 12922		22 90222		
				HFDR							
	► containing wa	ter, flame-ı	esistant	HFC			W	ISO 12922	90223		
Further inform	mation on the hydraulic	fluids:									
Temperature r	ange	°C	▶ N	1ineral oils		-10 +	-10 +80; for other temperatures please consult us				
°C			▶ S	► Special fluids		-10 +	-10 +50; for other temperatures please consult us				
Ambient temperature range °C					-20 +	60					
Viscosity rang	е	mn	n²/s			10 30	10 300; admissible start viscosity 2000				
	nissible degree of					Class 20)/18/15				
	of the hydraulic fluid ass according to ISO 440	06 (c)									

Notice

For applications outside these parameters, please consult us!

1) Maximum 10s, at most 50% of the duty cycle


 $\textbf{Bosch Rexroth AG},\,\mathsf{RE}\,10223/2019\text{-}02$

5




Internal gear pump | **PGH** Average characteristic curve values of frame sizes 2 and 3


Average characteristic curve values of frame sizes 2 and 3

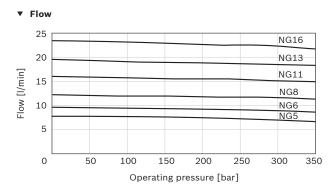

▼ Efficiency

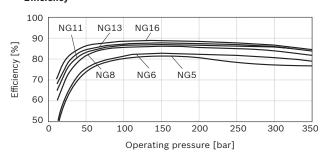


▼ Sound pressure level

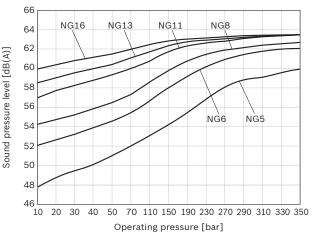

Notice

- ► Characteristic curves measured at n = 1450 rpm; $v = 41 \text{ mm}^2/\text{s}$; $\theta = 50 \text{ °C}$
- ➤ Sound pressure level measured in the sound measuring chamber according to DIN 45635, sheet 26; distance: Microphone pump = 1 m

▼ Drive power

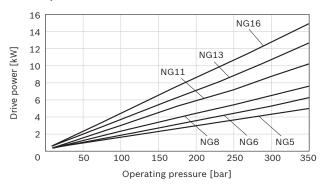

RE 10223/2019-02, Bosch Rexroth AG




6 **PGH** | Internal gear pump Dimensions of frame size 2

Dimensions [mm]


Dimensions of frame size 2

With cylindrical shaft or splined shaft and 2-hole mounting flange 82-2 according to ISO 3019-1

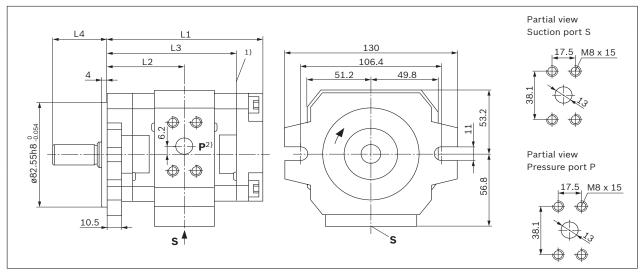


Туре	Material numbers	L1	L2	L3	L4	Suction port S ³⁾	Pressure connection P ³⁾
005 R E 07VU2	R900968999	- 110	54.2	89.5			
L 07V02	R900703725	110	54.2 89.5				
PGH2-2X/ 006 R E 07VU2	R900951301	- 112.5	55.5	92	41	DN13 (SAE 1/2")	DN13 (SAE 1/2")
E 07 V02	R900961547	112.5	55.5				
008 R E 07VU2	R900951302	- 116	57.3	95.5			
L 67702	R900961548	110	37.3	95.5			
005 R R 07VU2	R900972378	- 110	54.2	89.5		5 DN13 (SAE 1/2")	DN13 (SAE 1/2")
L 07 V02	R900703727						
PGH2-2X/ 006 R R 07VU2	R900961549	- 112.5	55.5	92	31.5		
FGH2-2X/000 — R 07V02	R900961550	112.5	55.5	92	31.3	DN13 (SAE 1/2)	DN13 (SAE 1/2)
008 R 07VU2	R900961551	116	57.3	95.5			
008 R 07VU2	R900961552	- 116	37.3	90.5			

▼ Cylindrical shaft with fitting key DIN 6885

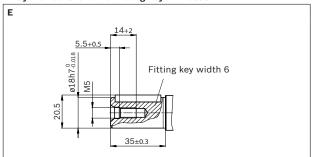

- 1) With multiple pumps, the combination part will start from here
- 2) The figure shows pumps with clockwise rotation; with pumps with counterclockwise rotation, the pressure port is on the opposite side!

▼ Splined shaft according to ISO 3019-1

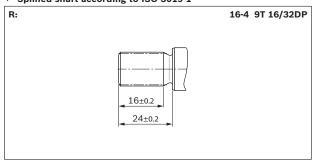

3) SAE flange connection according to ISO 6162-1




Dimensions [mm]

Internal gear pump | **PGH**Dimensions of frame size 3

7


Dimensions of frame size 3

With cylindrical shaft and 2-hole mounting flange 101-2 according to ISO 3019-1

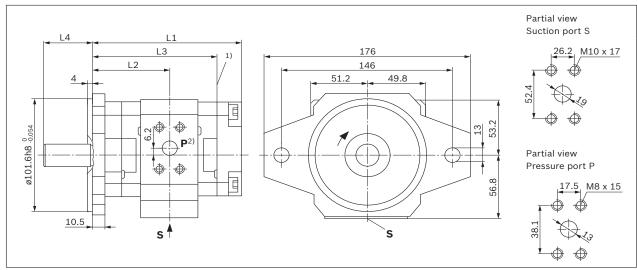

Туре	Material numbers	L1	L2	L3	L4	Suction port S ³⁾	Pressure connection P ³⁾
011 R E 07VU2	R900951303	120	66 E	107.5			
011 E 07VU2	U2 R900961553 128 66.5 107.5						
PGH3-2X/ 013 R E 07VU2	R900951304	- 133	69	112.5	41	DN25 (SAE 1")	DN13 (SAE 1/2")
L 07/02	R900961554						
016 R E 07VU2	R900951305	120	71 5	117 5			
016 E 07VU2	R900961555	- 138	71.5	117.5			

▼ Cylindrical shaft with fitting key DIN 6885

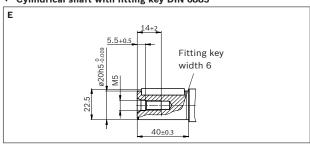

 $\mathsf{RE}\,10223/2019\text{-}02,\,\mathbf{Bosch}\,\,\mathbf{Rexroth}\,\,\mathbf{AG}$

¹⁾ With multiple pumps, the combination part will start from here

²⁾ The figure shows pumps with clockwise rotation; with pumps with counterclockwise rotation, the pressure port is on the opposite side!


³⁾ SAE flange connection according to ISO 6162-1



8 **PGH** | Internal gear pump Dimensions of frame size 2


Dimensions [mm]


With splined shaft and 2-hole mounting flange 82-2 according to ISO 3019-1

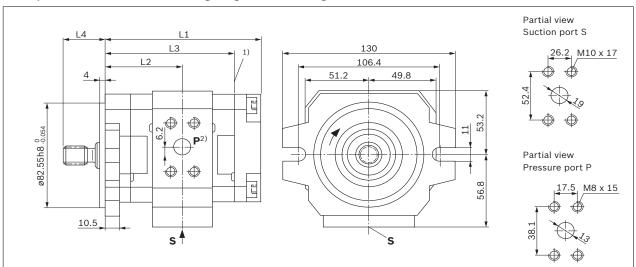

Туре	Material numbers	L1	L2	L3	L4	Suction port S ³⁾	Pressure connection P ³⁾
011 R 07VU2	R900961556	101 5	60	101			
011 R 07VU2	R900961559	121.5	60	101		DN25 (SAE 1")	DN13 (SAE 1/2")
PGH3-2X/ 013 R 07VU2	R900961557	- 126.5	62.5	106	31.5		
L R 07/02	R900961560				31.3		
016 R 07VU2	R900961558	101 5	65	111			
L R 07/02	R900961561	- 131.5	65	111			
PGH3-2X/ 016 R S 07VU2	R901281698	- 131.5	65	111	37	DN25 (SAE 1")	DN13 (SAE 1/2")
L 5 07 VU2	R901465533	131.5	65	111	31	DINZO (SAE I")	DIVIS (SAE 1/2")

▼ Splined shaft according to ISO 3019-1



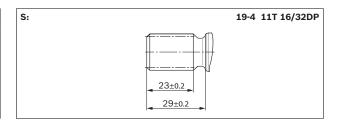

 $\textbf{Bosch Rexroth AG},\, \mathsf{RE}\, 10223/2019\text{-}02$

¹⁾ With multiple pumps, the combination part will start from here

²⁾ The figure shows pumps with clockwise rotation; with pumps with counterclockwise rotation, the pressure port is on the opposite side!

 $_{\mbox{\footnotesize 3)}}\,$ SAE flange connection according to ISO 6162-1

9



Internal gear pump | **PGH**Multiple pumps

Multiple pumps

All internal gear pumps of type PGH can be combined, every pump is equipped with an output gear tooth system. The possible combinations and the material numbers of the required combination parts are available in the following table.

Downstream pump	Upstream pump	
	PGH2-2X	PGH3-2X
PGH2-2X/RU2	R900886137	R900886137
PGH3-2X/RU2	R900886137	R900886137
PGP2-2X/JU2	R900886137	R900886137
PGF2-2X/JU2	R900886137	R900886137
AZPFRRB	R900886137	R900886137
PR4-1XWA	R901015657	R901015657
PGZ4-1X/TU2	R901405441	R901405441
PGZ5-1X/TU2	R901405441	R901405441

RE 10223/2019-02, Bosch Rexroth AG



Bosch Rexroth AG, RE 10223/2019-02

10 PGH | Internal gear pump Multiple pumps **Ordering code** Type 1) 01 2-fold **P2** 3-fold РЗ 02 Series of the first pump¹⁾ 03 Size of the first pump¹⁾ 04 Series of the second pump¹⁾ 05 Size of the second pump¹⁾ 06 Series of the third pump¹⁾ 07 Size of the third pump¹⁾ Direction of rotation 08 Viewed on drive shaft clockwise R L counterclockwise Drive shaft of the first pump 09 Cylindrical shaft with fitting key, DIN 6885 Ε Splined shaft according to ISO 3019-1 16-4 9T 16/32DP R 19-4 11T 16/32DP s Line connection of the first pump 10 Suction and pressure port: SAE flange connection according to ISO 6162-1 07 Drive shaft of the second pump1) 11 Cylindrical shaft with fitting key, DIN 6885 Α Splined shaft according to ISO 3019-1 16-4 9T 16/32DP J 16-4 9T 16/32DP R 19-4 11T 16/32DP Т Line connection of the second pump¹⁾ 12 Suction and pressure port Drive shaft of the third pump1) 13 Cylindrical shaft with fitting key, DIN 6885 Α Splined shaft according to ISO 3019-1 J 16-4 9T 16/32DP 16-4 9T 16/32DP R Т 19-4 11T 16/32DP Line connection of the third pump¹⁾ 14 Suction and pressure port Mounting flange of the first Pump 15 2-hole mounting flange according to ISO 3019-1 U2 1) For detailed information, see type key / data sheet of relevant pump

Knowledge is POWER – Motion Force Control is our Business

HYQUIP Limited New Brunswick Street Horwich Bolton Lancashire BL6 7JB UK



Dimensions [mm]

Internal gear pump | **PGH** Multiple pumps


11

Dimensions


The dimensional drawings show the front pump and the combination part. $^{1)}$

PGH2/PGH3

PGH2/PGH3 with combination part for PGH2, PGH3, PGF2, PGP2, AZPF

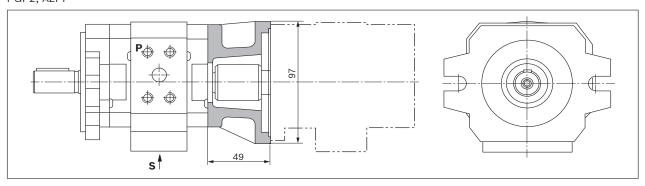


PGH2/PGH3 + R4-Mini

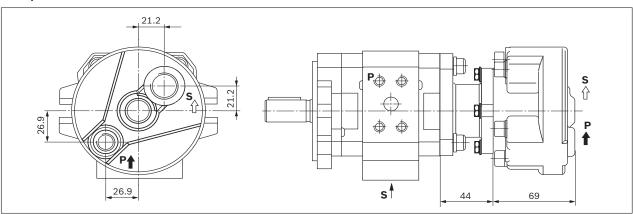

PGH2/PGH3 + PGZ

PGH2/PGH3 with combination part for PGZ4, PGZ5

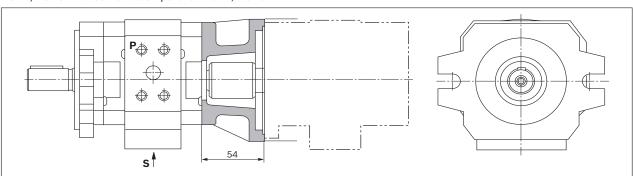

1) Dimensions of the single pumps see page 6 to 8 or the corresponding data sheets of the back pump.

 $\mathsf{RE}\,10223/2019\text{-}02, \mathbf{Bosch}\;\mathbf{Rexroth}\;\mathbf{AG}$



12 **PGH** | Internal gear pump Project planning information Dimensions [mm]

Project planning information

When using internal gear pumps, a manual, switchable or automatic bleeding option must moreover be provided. The bleeding point for manual bleeding must be provided in the pressure line in front of the first valve or check valve so that depressurized bleeding is possible.

Technical data

All specified technical data depend on production tolerances and are valid at certain boundary conditions. Please note that consequently, fluctuations are possible and that with certain boundary conditions (e.g. viscosity), the technical data may also change.

Characteristic curves

When designing the drive motor, please observe the maximum application parameters possible shown by the characteristic curves presented on page 5.

Sound pressure level

The sound pressure levels shown on page 5 were measured in the style of DIN 45635, Sheet 26. This means that only the noise emitted by the pump is shown. Ambient influences (place of installation, piping, etc.) were not included.

These levels always refer to only one pump. With internal gear pumps, the excitation of valves, pipelines, machine parts, etc. is very low due to the little flow pulsation (approx. 2 to 3%).

With unfavorable influences, the sound pressure level at the place of installation of the power unit may, however, still be 5 to 10 db(A) higher than the values of the pump itself.

Multiple pumps

- The same general technical data apply as for single pumps (see page 4).
- The combined pumps must all have the same direction of rotation.
- The pump with the largest torque should be intended as first pump.
- ► The maximum through-drive torque must be checked by the project planner for every application. This is also true for already existing (coded) multiple pumps.
- ► The total of the torques in a multiple pump must not exceed the maximum drive torque.
- Joint aspiration is not possible.
- ▶ Before operating pump combinations with different hydraulic fluids, please consult Bosch Rexroth.
- Medium and back pumps must be equipped with drive shafts version "R" (geared).
- The drive torque of a pump stage is calculated as follows:

$$T = \frac{\Delta p \cdot V \cdot 0.0159}{\eta_{hydr-mech}}$$

Key	
Т	Torque [Nm]
Δр	Operating pressure [bar]
V	Displacement [cm³]
η	Hydromechanical efficiency

▼ Maximum admissible torques [Nm]

Туре		Drive torque	Output torque	
	Cyl. shaft E	Splined shaft R	Splined shaft S	
PGH2	100	80	-	75
PGH3	110	80	155	75

Pump safety block

For limitation of the operating pressure or (and) for the solenoid-actuated unloading of the operating pressure, Bosch Rexroth recommends pump safety blocks according to the data sheets 25880 and 25891.



Internal gear pump | **PGH** Installation information

13

Installation information


Fluid tank

- Adjust useful volume of the tank to the operating conditions!
- The admissible fluid temperature must not be exceeded; include a cooler, if necessary.

Lines and connections

- ▶ Remove protective plugs from the pump.
- ► Select the inner width of the pipes according to the connections (suction speed 1 to 1.5 m/s).
- ▶ Inlet pressure see page 4.
- ▶ Thoroughly clean pipelines and fittings prior to installing.

Suggested pipe routing

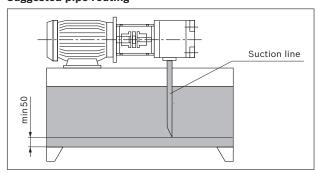

- ► Return fluid must not be directly sucked in again under any circumstances, i.e. select the largest distance possible between suction and return line.
- Suction line and return flow outlet must always lie clearly below the oil level.
- ▶ Ensure suction-tight assembly of the pipelines.

Filter


If possible, use return flow filters or pressure filters. (Only use suction filters in connection with underpressure switch / clogging indicator).

Hydraulic fluid

- Please observe our regulations according to data sheet 90220.
- ▶ Bosch Rexroth recommends brand hydraulic fluids.
- Different hydraulic fluid types must not be mixed as this might result in degradation and deterioration of the lubricity.
- According to the operating conditions, the hydraulic fluid must be renewed at certain time intervals. Residue should also be cleaned from the hydraulic fluid reservoir at this time.

Drive


Electric motor + pump carrier + coupling + pump



- No radial and axial forces on the pump drive shaft admissible!
- ▶ Motor and pump must be exactly aligned!
- Always use a coupling that is suitable for compensating shaft displacements!
- Avoid axial forces when attaching the coupling, i.e. do not assemble it using impact tools or by pressing it on! Use an internal thread of the drive shaft!



Installation positions

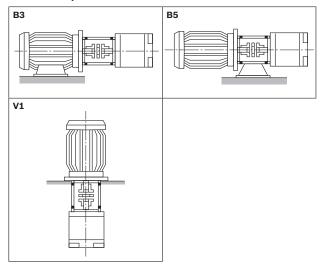

 $\mathsf{RE}\,10223/2019\text{-}02,\,\mathbf{Bosch}\,\,\mathbf{Rexroth}\,\,\mathbf{AG}$



14 **PGH** | Internal gear pump Commissioning information

Dimensions [mm]

Commissioning information

Preparation

- Check whether the system is thoroughly and properly installed.
- Only fill in hydraulic fluid through filters with the required minimum retention rate.
- ► Completely fill the pump with hydraulic fluid through the suction or pressure pipe.
- Check the direction of rotation of the motor for compliance with the direction of rotation according to the pump type.

Bleeding

- Manually open the bleed port at the system or switch to depressurized circulation according to the operating instructions of the system. During the bleeding, depressurized discharge of entrapped air must be ensured.
- To bleed the pump, switch the motor on and immediately off again (jog mode). This process is to be repeated until complete bleeding of the pump is ensured.
- ► Close the manually opened bleed port again.

Commissioning

- ▶ If complete bleeding of the pump has been ensured, switch on the motor. Let the pump run at zero pressure until the system is completely bled. For system air bleeding, observe the operating instructions of the system.
- ► Commission the system according to the operating instructions of the system and load the pump.
- ► After some operating time, check the hydraulic fluid in the tank for bubble or foam formation at the surface.

Operation

- ▶ During operation, look out for changes in the noise characteristic. Due to the heating of the hydraulic fluid, slightly increasing noises are normal. A considerable increase in noise or short-time stochastic noise changes may be an indication of sucked in air. If suction pipes are too short or the filling level heights of the hydraulic fluid are too low, air may also be sucked in through a vortex.
- Changes in operating speeds, temperatures, increasing noises or power consumption are an indication of wear or damage at the system or the pump.

Re-commissioning

- Check the pump and system for leakage. Leaks are an indication of leakage below the hydraulic fluid level. An increased hydraulic fluid level in the tank is an indication of leakage above the hydraulic fluid level.
- ► If the pump is arranged above the hydraulic fluid level, the pump may run empty due to leakage, e.g. a worn shaft seal ring. In this case, the system must be bled again upon re-commissioning. Initiate the repair.
- After repair and maintenance works, bleeding is again necessary.
- If the system is intact, switch on the motor.

General information

- ► The pumps delivered by us have been checked for function and performance. The warranty only applies to the supplied configuration.
- ▶ Repair works may only be carried out by the manufacturer or their authorized dealers and agencies. The claim to warranty expires if the product is incorrectly repaired, assembled, commissioned and operated, not used as intended and/or handled improperly.
- Opening the internal gear pump or extending or modifying it will invalidate the claim to warranty.



Internal gear pump | **PGH** 15 Commissioning information

Notes

- Assembly, maintenance and repair of the pump may only be carried out by authorized, trained and instructed personnel.
- ▶ Pump may only be operated with the admissible data (see page 4).
- ▶ Only operate the pump when in good working order.
- ▶ For all works at the pump, depressurize the system!
- ► Unauthorized modifications or changes which affect the safety and function are not admissible!
- ► Apply protective devices (e.g. coupling guard) and/or do not remove existing protective devices!
- ► Always ensure tight seat of all mounting screws (Observe the specified tightening torque)!
- ► The generally valid safety and accident prevention regulations must be imperatively complied with!

RE 10223/2019-02, **Bosch Rexroth AG**